 
 


MICRO-Pedi™ Pro

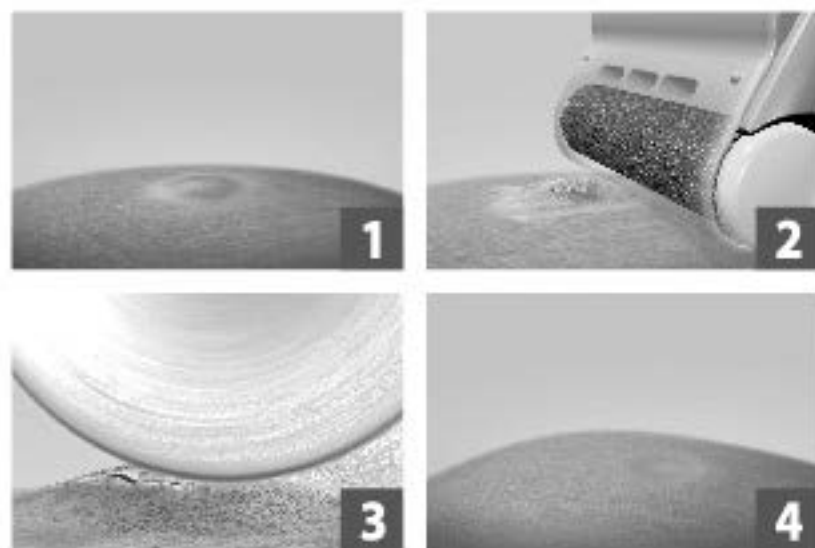

AP-3RPR
Rechargeable

GENERAL DESCRIPTION OF PARTS

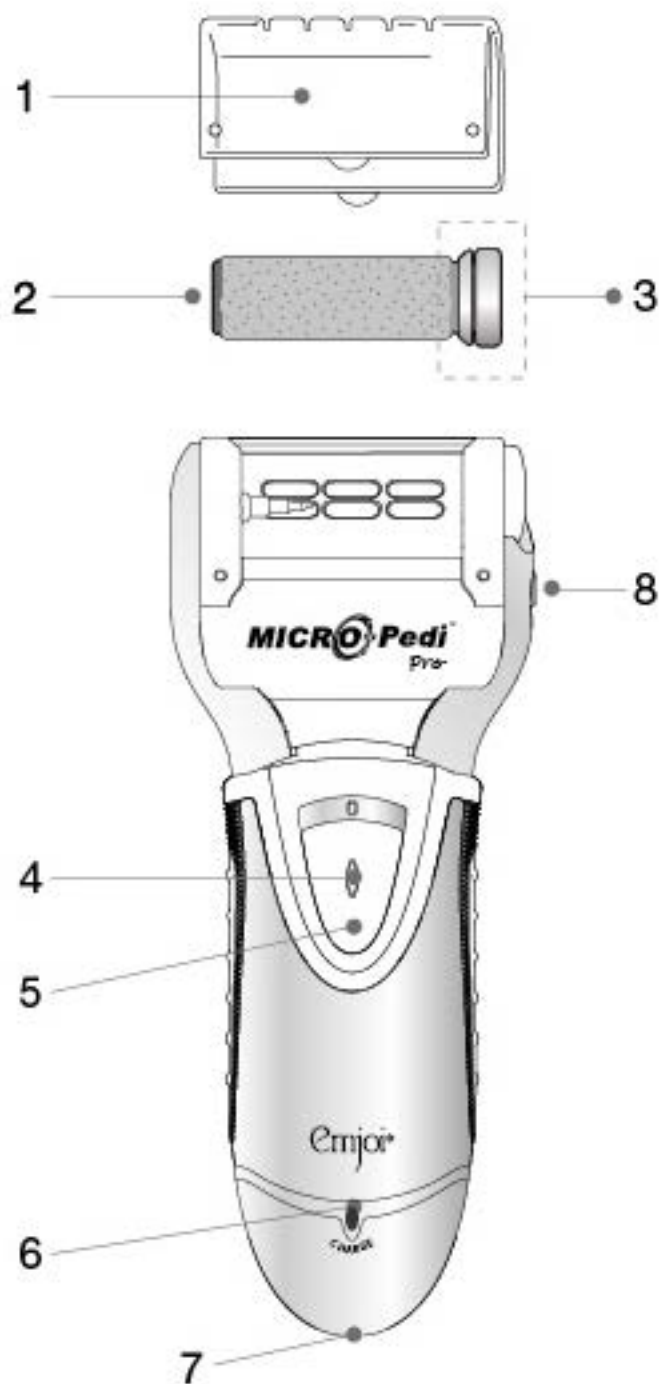

1. Protective Cover
2. Micro-Pedi Pro Roller
 - blue for regular skin
3. End Cap of Micro-Pedi Pro Roller
4. Safety Switch Lock
5. On/Off switch
6. Charging Indicator Lamp
7. Adapter Inlet
8. Release Button for Micro-Pedi Pro Roller

MICRO **Pedi**TM *Pro*

The **Emjoi® Micro-Pedi Pro** is an innovative, rechargeable device created to smooth dry, rough and calloused skin on the feet. The unique roller, made of microscopic mineral particles, pulverizes dead skin and turns it into powder. Spinning at 360° (an amazing 30 times a second) this one of a kind device gently and effectively buffs away hard, jagged skin on the soles and heels in an instant. This amazing tool gives professional results and will have skin smooth in seconds.

Each Emjoi® Micro-Pedi Pro roller is recommended for one person only. For hygienic reasons, the Micro-Pedi Pro roller should not be shared with others.

INSTRUCTIONS FOR USE

Before using your Emjoi® Micro-Pedi Pro, please read this instruction manual carefully and completely.

1. Insert the adapter plug into the adapter inlet and plug your adapter into the electrical outlet (fig.1 - fig.2).
2. When your unit is being charged, red light on the charging indicator lamp will light up. Charge your unit for 16 hours initially. Recharging time is 12-16 hours, depending on the battery power.
3. When you are finished charging your unit, remove the adapter plug from the adapter inlet at the bottom of the unit (fig. 3).

Note: The Emjoi® Micro-Pedi Pro unit cannot be operated when it is being charged.

Caution: Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.



HOW TO USE

Emjoi® Micro-Pedi Pro is designed for smoothing coarse skin on the feet and heels (fig. 4). Do not use this device anywhere else on the body.

Note: Only use Micro-Pedi Pro roller on dry skin.

1. Wash and clean the skin and dry fully.

Note: Do not use on broken or bleeding skin.

2. Select the Micro-Pedi Pro roller you want and place it into the unit. See section of **Changing the Micro-Pedi Pro Roller** on how to remove and replace the roller.
3. Remove the protective cover from the unit and it is ready to use.



- Turn on the unit (fig. 5) and gently rotate (back and forth or side to side) over the callous/corn/hard skin area for 2-3 seconds. **Do not press hard- gently glide the unit over desired area.** The unit will stop if it is pressed too hard on the skin. Turn the unit off and check if you achieved the softness you desire. If not, turn on the unit and go over the area for 2-3 more seconds and check again. Continue to use this method until the level of smoothness is obtained.

Warning: Stop using if skin becomes sore or inflamed.

Warning: Do not use on skin for more than 2-3 seconds at a time.

- Turn the unit off (fig 6).
- Rinse the skin or use a wet towel to get rid of the excess dead particles.
- To clean the **Emjoi® Micro-Pedi Pro**, please see the Cleaning section.
- Keep the protective cover on your unit when it is not in use.



CHANGING THE MICRO-PEDI PRO ROLLER

The Micro-Pedi Pro roller contains fragile parts, please handle them with care.

Please take extra care when replacing the Micro-Pedi Pro roller.

 
Note: Micro-Pedi Pro rollers that are broken or worn could cause damage to the skin.

Change the Micro-Pedi Pro roller as needed for best result. Rollers last for a few sessions depending on frequency of use and size of area being treated. Replace as needed.


Replace the **Emjoi® Micro-Pedi Pro** roller when you find any defects to the roller or when you find them less effective.

Make sure the unit is turned off before replacing the Micro-Pedi Pro roller.

1. Pull down the release button, on the side of the unit, while the end cap is facing up and the Micro-Pedi Pro roller will pop out (fig. 7 & 8).
2. After the Micro-Pedi Pro roller pops out, remove it from the cylinder holding the end cap of the Micro-Pedi Pro roller (fig. 9) and dispose of it.

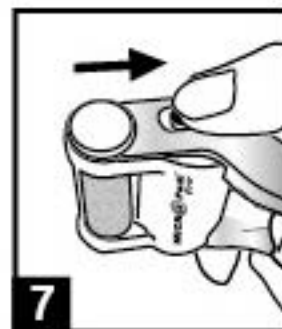

 3. Remove the Micro-Pedi Pro roller from the replacement container (fig. 10), by pressing the bottom with your pointer finger and catching it in the palm of your opposite hand.
4. Place a new Micro-Pedi Pro roller into the unit until you hear a 'click' sound. Be sure to insert the new Micro-Pedi Pro roller into the unit with the thinner side going into the unit (fig. 11 & 12).
5. After placing a new Micro-Pedi Pro roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (fig. 13).

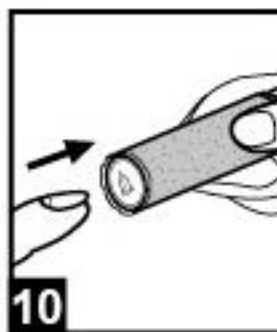

CLEANING

The **Emjoi® Micro-Pedi Pro** is water resistant. It can be rinsed under water for cleaning but it is not water proof. Do not submerge the unit into water on purpose as this may cause defects to the unit. **Micro-Pedi Pro rollers should not be placed into water.**

1. Turn the unit off.
2. Remove the protective cover and the Micro-Pedi Pro roller from the unit.
Note: Micro-Pedi Pro rollers should not be placed into water.
3. Rinse the unit under the tap for 5-8 seconds. Wipe the body of the unit with a clean dry cloth.
4. Replace the protective cover.

WARNING / IMPORTANT

- Before using your **Emjoi® Micro-Pedi Pro** please read all these instructions carefully and completely.
- Use the **Emjoi® Micro-Pedi Pro** only for purposes described in this instruction book.
- Please keep these instructions for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Rollers are intended for one person. Rollers should not be shared.
- **Only use the Emjoi® Micro-Pedi Pro on the feet and heels.**
- **Warning** - To reduce the risk of burns, fires or electric shock, never leave your **Emjoi® Micro-Pedi Pro** unattended when plugged in.
- Do not use an extension cord with this unit.
- Keep the appliance dry.
- This unit is for dry use only.
- Always charge your unit in a cool, dry area.
- Do not place or store the unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0 - 40°C.
- Do not store your unit where it can fall into a tub or sink of water.
- The **Emjoi® Micro-Pedi Pro** must be used on dry skin.
- Remove the roller and the unit can be rinsed under running tap water. Do not submerge the unit in water.
- Do not immerse the **Emjoi® Micro-Pedi Pro** in water on purpose. This may cause the unit to malfunction.
- Never use your unit if it has been damaged or submerged into water.
- The **Emjoi® Micro-Pedi Pro** can be used CORDLESS only, i.e. used without the adapter when it is fully charged. Prior to using the unit for the first time cordlessly it needs to be charged for 16 hours, recharging time is 12-16 hours.

- When you unplug your unit please pull on the plug and not on the cord.
- Do not reach for your unit if it has fallen into water. Immediately unplug the unit.
- Do not turn your unit On if the roller is not attached.
- Always unplug your unit when it is not in use, unless it is being recharged, and before cleaning it.
- Do not wrap the cord of your adapter around the unit.
- Keep the cord of the adapter away from hot surfaces.
- Never use your unit if the adapter cord or electrical outlet is damaged.
- Do not cut off the adapter to use it with another plug as this can be a hazardous situation.
- Only use your **Emjoi® Micro-Pedi Pro** with the adapter supplied with the unit. For questions regarding your adapter in the US contact 1-888-99EMJOI, M-F, 9-5 EST.
- **Caution:** Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.
- Do not use this unit if the roller is damaged as this could lead to injury.
- Never use your unit if it has been damaged or dropped into water.
- Do not drop or insert anything into any openings of the unit.
- Do not use your unit outdoors.
- Do not use your unit where aerosol products or oxygen is being used.
- Children should be supervised to ensure that they do not play with this appliance.
- Keep your unit out of reach of children.
- This appliance is not to be used on, by or near children or invalids.
- Only use this unit on clean, dry, lotion free feet.

- **To prevent accidents and injury to you or damage to the unit** - when your **Emjoi® Micro-Pedi Pro** is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes as well as clothes, brushes, wires, cords, shoelaces etc.
- If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product.
- If you have a pacemaker consult with your health care provider prior to use.
- To preserve and extend the life of your battery it is recommended to occasionally discharge the battery, let the charge run out completely, then recharge it.
- This appliance must be disconnected from the supply mains when removing the battery.
- The battery must be removed from the appliance before it is scrapped.
- The battery is to be disposed of safely.
- Do not continually rub the unit on the same area or apply strong pressure.
- Keep the protective cap on your unit when it is not in use.
- Each **Emjoi® Micro-Pedi Pro** roller is recommended for one person only. For hygienic reasons, the Micro Pedi Pro roller should not be shared with others.
- Do not use on skin for more than 2-3 seconds at a time.
- Do not use if you have diabetes or poor blood circulation.
- If you have any skin conditions or other medical issues, please consult with your physician prior to use.
- Do not use the Micro-Pedi Pro roller when you find worn or nicked edges on the roller.
- Do not use on skin that is red, irritated, inflamed, infected or blistered.
- Do not use on warts.
- Do not use on sores or open wounds.

- Discontinue use immediately if you experience any pain or irritation.
- Overuse may cause skin irritation.
- Seek medical attention if skin becomes severely irritated or bleeds.
- Do not use water or any other liquid on the Micro-Pedi Pro rollers.
- Do not turn your unit On if the Micro-Pedi Pro roller is not attached.
- Do not use this unit if the Micro-Pedi Pro roller is damaged as this could lead to injury.
- Change the Micro-Pedi Pro roller as needed for best result. Rollers last for a few sessions depending on frequency of use and size of area being treated.

Warranty

The **Emjoi® Micro-Pedi Pro** warranty against defects in materials and workmanship lasts one year from the date of purchase.

Keep original receipt for warranty service.

During this warranty period, return the product to Emjoi, Inc. with proof of purchase to FDR Station, PO box 7406, New York, NY 10150. Emjoi will take care of repair, or at their discretion, replacement of a defective unit without charge. For questions regarding this policy you may call toll free 1-888-99-EMJOI (1-888-993-6564) M-F, 9-5 EST.

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center.

The manufacturers and distributors of the **Emjoi® Micro-Pedi Pro** do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

Model: AP-3RPR

Patents pending

Made in P.R.C

© Soft Lines International Ltd. 2012